

# MAGNA/CURE® UDC-2

Magna/Cure® UDC-2 direct emulsion allows screen makers to obtain remarkable image quality and exceptionally durable stencils. UDC-2 dual cure emulsion is designed for the widest range of imaging applications.

- **Excellent definition and line edge**
- **Blue color offers excellent contrast yet easy registration.**
- **Highest buildup proud of mesh with low Rz values**
- **Clear and Dyed formulations**
- **For use with solvent, UV and Plastisol Inks**

## Premium Quality

Premium emulsion designed for the widest range of imaging applications.



### CHEMICALS REQUIRED

Chroma/Wet™ iSC degreaser / adhesion promoter

Chroma/Strip™ iSC ready-to-use stencil remover

### MATERIALS REQUIRED

Exposure unit  
Clean work area  
Washout area  
Scoop coater

**RECOMMENDED**  
Drying cabinet  
Pressure washer  
Exposure calculator

### SAFETY AND HANDLING

Magna/Cure UDC-2 emulsion should be handled like any other dual cure emulsion. Avoid contact with skin and eyes. This material is not hazardous when used within reasonable standards of industrial hygiene and safe working practices. Refer to SDS for further information.

### STANDARD SIZES

Quart, gallon, 3.5 gallon, 50 gal. drum  
(Available in clear and dyed formulation)

### SPECIFICATIONS

Appearance: Blue  
Viscosity: 3500 CPS (sensitized)  
Solids: 36% (sensitized)  
Exposure: Fast (see reverse)

### STORAGE

Magna/Cure UDC-2 emulsion should be stored at room temperature and should not be stored at temperatures above 80°F (27°C) or below 32°F (0°C). Magna/Cure UDC-2 emulsion should be stored in its original container.

Sensitized UDC-2 emulsion has a shelf life of 4 to 6 weeks at room temperature (72°F) or longer when refrigerated. To maximize sensitized shelf life use only distilled water to dissolve diazo sensitizer.

Coated, unexposed screens can be stored as long as one month in a clean, cool, dry and completely dark area.

Expiration date. Always check the expiration date on sensitizer bottle to assure freshness.

Protect from freezing. Magna/Cure UDC-2 is not freeze/thaw stable.

# MAGNA/CURE® UDC-2



## INSTRUCTIONS

### DEGREASE

Work up a lather on both sides of mesh to degrease. Be sure to use only high-quality mesh degreaser, such as Chroma/Wet iSC designed specifically for this purpose. Rinse thoroughly.



### MIX

Mix emulsion and sensitizer according to instructions on bottle. Let emulsion stand at least two hours, preferably overnight, before using.


### COAT

Fill scoop coater with room temperature emulsion. Slowly apply first coat to print side. Next, coat squeegee side with 1-3 coats depending upon thickness required. **For most art, a 1X2 coating will be optimal.** If a thicker stencil is required, apply additional wet-on-wet coatings from the squeegee side.



### DRY

Dry screen thoroughly in horizontal position with print side down, using a completely clean and dark drying cabinet. Temperature should not exceed 110°F (43°C). Relative humidity should not exceed 50%; lower RH provides faster drying and allows for more efficient curing.

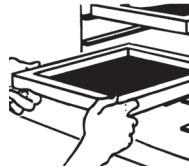

### EXPOSE

Using an exposure calculator to determine proper exposure times for Magna/Cure UDC-2, place emulsion side of photopositive in contact with print side of screen. See *exposure guidelines at right*.



### DEVELOP

Gently spray both sides of screen with lukewarm water, wait 30 seconds then gently wash print side of the screen until image is fully open. Rinse both sides thoroughly. Dry screen completely and you are ready to print.



## RECLAIM

Apply high-quality screen reclaimer, such as Chroma/Strip iSC to both sides. Scrub area to be reclaimed with a stiff nylon brush to ensure entire surface is wet and let sit until stencil begins to dissolve. Remove stencil residue with pressure washer, then rinse with hose, thoroughly flooding screen and frame.



\*Do not let reclaimer dry

## EXPOSURE GUIDELINES

Note: Exposure times are suggested only as a guide. Individual exposure times may vary depending upon equipment used, bulb age, and other shop conditions. Suggested exposure times are as follows:

Exposure times below were set for 5KW unit at 40" from frame. All screen mesh was yellow in color. Screens were coated wet on wet, once on print side and twice on squeegee side.

## SUGGESTED MINIMUM EXPOSURE GUIDELINES

Mesh	Time
158 mesh TPI (62 cm)	60 - 90 sec.
230 mesh TPI (90 cm)	45 - 60 sec.
305 mesh TPI (120 cm)	30 - 45 sec.

\* Exposure times were determined using the Chromaline Exposure Calculator.

**AVOID FAILURE:** Dual cure emulsions have a very wide exposure latitude. Underexposed stencils often appear acceptable, but premature breakdown can occur on the press. When determining exposure speed, always overexpose your test stencil. Then, using the Chromaline Exposure Calculator, reduce exposure time until acceptable image quality is achieved. This will help assure good durability.



PRINT WITH  
CONFIDENCE

help@chromaline.com | www.chromaline.com

Toll Free: (800) 328-4261  
International: +1-218-628-2217

**WARNING:** This product can expose you to chemicals including Benzophenone and 1,4-dioxane, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov



An IKONICS Company | ISO 9001 Certified



Follow us!